
Series TMV

THERMOSTATIC EXPANSION VALVES INTERCHANGEABLE ORIFICE CARTRIDGE

PRODUCT DATA

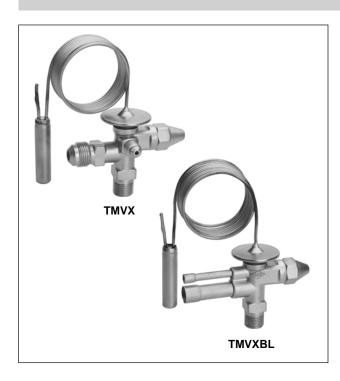

Application

Thermostatic expansion valves series TMV are used in general refrigeration and for original equipment.

Plants with one or more circuits such as refrigerated cabinets even with cramped mounting conditions, ice and cream machines, milk cooling units, water chillers, vehicle air conditioning systems, cold stores, and air conditioning systems.

Materials

Body brass

Thermal head stainless steel
Connection solder: copper flare: brass

Features

- TMV / TMVBL: with internal pressure equalisation; for single injection in installations with one or more cooling circuits
- TMVX / TMVXBL: with external pressure equalisation; for optimal evaporation effectiveness in all applications. Obligatory for multiple injection by liquid distributors
- Combi adsorber charge
 - The same valve can be used for different refrigerants (see table on page 2)
 - Controller charge is high sensitive and responsive thus lowest possible level of superheat can be achieved
 - o Charge is not sensitive to effects of temperature on the capillary tube and valve head
 - Damping characteristic results in stable control behaviour
- . Suitable for systems with hot gas defrosting
- Adjustable superheat setting
- Flare connections: TMV, TMVX
- Flare / solder connections: TMVBL, TMVXBL
- Extreme durable due to stainless steel head and stainless steel diaphragm welded using protective gas
- · Interchangeable orifice cartridges
- Refrigerants: R134a, R401A, R12

R22, R407C, R407A, R422D R404A, R507A, R402A, R407B, R502

R410A

R448A, R449A, R407A, R407F, R455A

Specification

Nominal capacity range 0.52 to 22.4 kW R22

(small orifice graduation for optimal control behaviour, interchangeable orifice

cartridges)

Evaporating temperature range see table on page 2

Maximum pressure PS see table on page 2

Maximum test pressure PF see table on page 2

Max. ambient temperature100 °CMax. bulb temperature140 °CStatic superheatapprox. 3 KLength of capillary tube1.5 mBulb diameter12 mm

Thermal Charges and Temperature Ranges

1. Adsorber charge

Refrigerant	Evaporation temperature range	PS (bar(a))	PF (bar(a))
R134a, R401A, R12	+15 °C to -30 °C	34	37.4
R22, R407C, R407A, R422D	+15 °C to -45 °C	36	39.6
R404A, R507A,	±0 °C to -50 °C	36	39.6
R402A, R407B, R502	+15 °C to -30 °C	36	39.6
R407C	+15 °C to -30 °C	36	39.6
R410A	+15 °C to -20 °C	40	44
R448A, R449A, R407A, R407F, R455A	±0 °C to -45 °C	36	39.6

Further refrigerants on request.

Thermal systems with adsorber charge are completely insensitive to effects of temperature on the capillary tube and valve head. It reacts only according to the temperature of the bulb.

Thus, Honeywell TMV valves with combi adsorber charge work absolutely reliable, even in icy condition or while defrosting using hot gas.

2. Adsorber charge with pressure limiting performance MOP

Refri- gerant	Evaporation temperature range	МОР	PS (bar(a))	PF (bar(a))
R134a,	+5 °C to -30 °C	MOP A +15 °C	34	37.4
R401A, R12	-10 °C to -30 °C	MOP A ±0 °C	29	31.9
R22,	+5 °C to -45 °C	MOP A +15 °C	36	39.6
R407C, R407A,	-10 °C to -45 °C	MOP A ±0 °C	29	31.9
R422D	-27 °C to -45 °C	MOP A -18 °C	29	31.9
R404A,	-10 °C to -50 °C	MOP A ±0 °C	36	39.6
R507A, R402A.	-20 °C to -50 °C	MOP A -10 °C	34	37.4
R407B, R502	-27 °C to -50 °C	MOP A -18 °C	34	37.4
R448A, R449A, R407A, R407F, R455A	-27 °C to -45 °C	MOP A -18 °C	36	39.6

Further refrigerants and MOP on request


Capacities

Turno	Orifice size	Nominal capacity (kW)*										
Туре		R448A	R449A	R407A	R407F	R455A	R134a	R22	R407C	R404A	R507A	R410A
	0.3	0.51	0.50	0.50	0.56	0.47	0.36	0.52	0.50	0.36	0.36	0.62
	0.5	0.96	0.95	0.96	1.07	0.90	0.69	0.99	0.95	0.68	0.69	1.2
	0.7	1.36	1.34	1.36	1.52	1.27	1.0	1.4	1.3	0.97	0.98	1.6
TMV	1.0	1.95	1.91	1.94	2.17	1.82	1.4	2.0	1.9	1.4	1.4	2.4
TMVX	1.5	3.12	3.06	3.11	3.47	2.91	2.2	3.2	3.1	2.2	2.3	3.8
TMVBL	2.0	3.89	3.82	3.88	4.34	3.63	2.9	4.0	3.9	2.8	2.9	4.8
TMVXBL	2.5	5.65	5.54	5.63	6.29	5.27	4.0	5.8	5.6	4.1	4.1	6.9
TIVIVADE	3.0	9.06	8.89	9.02	10.09	8.44	6.6	9.3	8.9	6.5	6.6	11.1
	3.5	11.88	11.66	11.84	13.24	11.08	8.7	12.2	11.7	8.6	8.7	14.6
	4.5	16.55	16.25	16.50	18.45	15.43	11.8	17.0	16.4	12.0	12.1	20.3
	4.75	21.81	21.41	21.74	24.30	20.34	15.9	22.4	21.6	15.8	15.9	26.8

^{*} Capacities are based on to = +4 °C, to = +38 °C and 1 K subcooled liquid refrigerant entering the valve. For other operating conditions see capacity charts in Honeywell catalogue or consult the Honeywell software.


Dimensions and Weights

Туре		Weight			
	Inlet (B)	Outlet (A)	Pressure equaliser (C)	(kg)	
TMV	5/8" UNF	3/4" UNF	-	approx. 0.35	
TMVX	5/8" UNF	3/4" UNF	7/16" UNF	approx. 0.36	
TMVBL	5/8" UNF	12 mm ODF	-		
	5/8" UNF	1/2" ODF	-	approx. 0.33	
TMVXBL	5/8" UNF	12 mm ODF	6 mm ODF	approx 0.24	
	5/8" UNF	1/2" ODF	1/4" ODF	approx. 0.34	

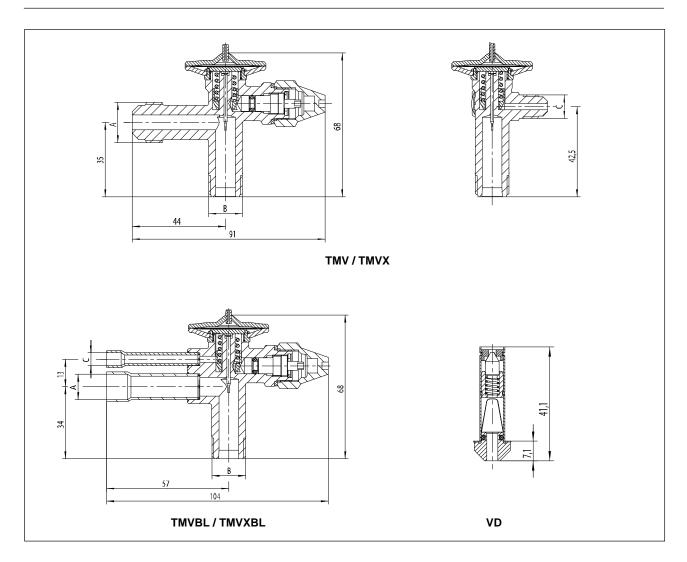

Type Code / Order Information (Part Programme)

1. Valve body

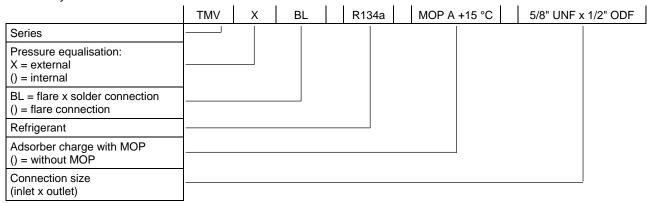

2. Orifice cartridge

	VD	0.5
Series		
Orifice size		

Installation

- The valves may be installed in any position.
- The external pressure equaliser line should be 6 mm or 1/4" in diameter and is to be connected downstream of the remote bulb. An overbow is recommended in order to prevent the ingress of oil into the equaliser line.
- The bulb should preferably be positioned on the upper half
 of a horizontal suction line but never after a liquid trap. As
 a general rule, bulbs of expansion valves should be
 insulated to prevent them being affected by the ambient
 temperature.
- Do not bend or squeeze the bulb when tightening the bulb clamp!
- When soldering the valve, the valve body must not get warmer than 100 °C.
- When tightening flare nuts of the flare connections grip at wrench flats on the valve body.
- Constructive modifications at the valve are not allowed.

Superheat Adjustment

In general the Honeywell valves should be installed with the factory setting for the used refrigerant unaltered.

At combi adsorber valves the label on the capillary tube indicates how to adjust the adjusting spindle (with arrow for direction), depending on the refrigerant used. This correction of the adjustment is essential to ensure that the control performance of the valve is correct. The refrigerant used must be marked on the label.

This superheat adjustment is calibrated for lowest superheating and optimum evaporator utilisation. However, should it be necessary to adjust the superheat, turn the adjusting spindle as follows:

Turning clockwise

reduced refrigerant mass flow,

increase of superheat

Turning counterclockwise

increased refrigerant mass flow, decrease of superheat

One turn of adjusting spindle alters superheat setting by approx. 0.55 bar. Increase of superheat setting results in a lower MOP-value and vice versa.

Special Accessory:

Adapter series LA for solder connection at the inlet for 6 mm, 10 mm, 1/4", 3/8".

Honeywell

Automation and Control Solutions

Honeywell GmbH Hardhofweg

74821 Mosbach/Germany
Phone: +49 (0) 62 61 / 81-475
Fax: +49 (0) 62 61 / 81-461

E-Mail: cooling.mosbach@honeywell.com

www.honeywell-cooling.com

Manufactured for and on behalf of the Environment and Combustion Controls Division of Honeywell Technologies Sàrl, 1180 Rolle, Z. A. La Pièce 16, Switzerland by its authorized representative Honeywell GmbH